

Access Steps

Your vehicle has been specified with one or more access steps. These are regularly fitted to the front driver and passenger door or the side sliding doors and are designed solely to aid entry and exit from the vehicle. Please note that underfloor mounted steps, although low profile by design, do hang down and reduce the vehicle's ground clearance. **Be careful when driving over speed bumps or near high kerbs.**

Manual Steps

This type of step has a spring loaded mechanism that is activated by pushing on the tread edge of the step or on the pedal provided (as in the image on the right) depending on the make and model fitted.

The step can be stowed by simply pushing the tread all the way in with your foot until the internal latches engage. **Always stow the step before attempting to drive the vehicle.**

Electric Steps

This type of step is powered in and out by an electric motor which is normally controlled by a door contact switch which senses when a door is opened and closed. A master rocker switch situated on the dashboard controls how the step functions:


Rocker switch on: Step deploys automatically when the door is opened and stows when it is closed.

Rocker switch off: Step remains in the position that it was when switched off. Please note, if switched off when deployed, it will not stow when the door is closed.

The red status light shows that the step is deployed. **Always ensure that the step is stowed before attempting to drive the vehicle.**

Maintenance

At least once a month, use a jet washer or a normal hose pipe to remove as much dirt as possible - this applies to both manual and electric step types (all electrical connections in these steps are waterproof). Failure to clean steps regularly may result in the failure of the step in service and may not be covered under warranty.

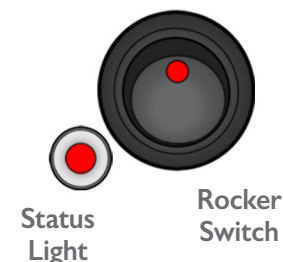

Important Safety Notes

Please read and understand the full operating instructions supplied by the manufacturer
Please note that any step mounted underneath your vehicle will reduce its ground clearance
Do not drive the vehicle with a step deployed
Respect the safe working load of the step

If you have any questions about your vehicle, please do not hesitate to call us on **01924 442386** or email customerservices@bristolstreetversa.com