



Citroën Berlingo Ramp

Your vehicle is equipped with the innovative FlexiRamp system that is low angle and easy to use, and also allows a full sized luggage compartment when the vehicle is not carrying a wheelchair.




Ramp operation

The ramp can be lowered by using the red lever (on the ramp, situated to the right) to release the catches

Carefully lower the ramp to the ground, deploying the fold out yellow flap on the way down

To stow the ramp, lift it into the upright position and push it into the vehicle until the catches click shut

If using the fold flat facility in conjunction with rear seats, the yellow flap must be folded away after use

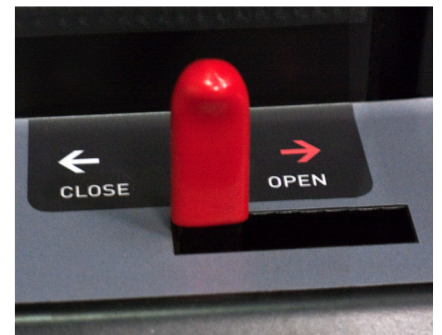


Fold flat function

With the ramp clicked into it's upright position, lift the ramp upwards

Carefully lower the ramp into the vehicle and clip into position using the fixings provided on either side

To raise the ramp, pull it back up into the upright position, ensuring it drops back down before deploying the ramp

When folded flat the ramp can carry 50kg

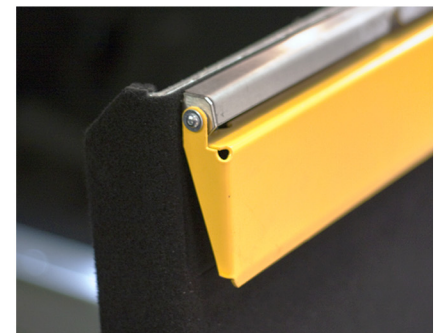

Important Safety Notes

Do not drive the vehicle with a ramp deployed

Respect the safe working load which is displayed on the ramp



If you have any questions about your vehicle, please do not hesitate to call us on 01924 442386 or email at customerservices@bristolstreetversa.com

