

Ford Connect

Wheelchair Accessible Vehicle

The Ford Connect is a relaxing and comfortable place to be. Great to drive, great to sit in, it boasts premium finishes, high quality materials and fuel efficiency without compromising everyday practicality.

The wheelchair accessible Ford Connect from Versa is a real car-like WAV, with the conversion mirroring all the comfort, safety and ease of use from Ford. Every aspect is meticulously designed and implemented ensuring the enjoyment of every one of your journeys.



Nationwide
Service



High Quality
Conversions



Friendly and
Experienced Team



Customer
Aftercare


Mobility experts you can trust

Ford Connect WAV


The wheelchair accessible Ford Connect by Versa is based on the Ford Grand Tourneo Connect and can accommodate the wheelchair user and up to five seated passengers (including the driver); there is also the option of up to seven seated passengers when the wheelchair user isn't travelling. Twin sliding doors come as standard allowing ease of passenger access. Wheelchair access is via a lightweight manual ramp which can also be upgraded to fold flat into the vehicle. This means that when the wheelchair user is not travelling, a huge and easily accessible boot space can be created. We offer two different seating options. Our 'Bench' conversion retains the original Ford bench seat in the rear and our 'Basic' conversion removes and replaces the Ford bench seat with one or two individual seats for greater flexibility. This wonderfully versatile vehicle has Ford 60/40 folding seats, meaning that they fold and tip to maximise space and optimise comfort. ISOFix mountings mean the whole family can travel safely and all seats are full-sized, ensuring comfort during the ride. The Connect is available in either automatic or manual transmission.

Features include electric windows, 16" alloy wheels, DAB radio with Bluetooth & 4.2" TFT screen, cruise control with intelligent speed assist, power/heated mirrors and day time running lights.


Vehicle Layouts

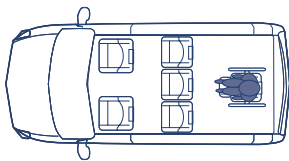

Standard 'Bench' conversion retains the original Ford seats with one wheelchair position.

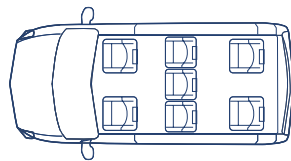

Option of one or two additional rear seats for use when the wheelchair user isn't travelling.

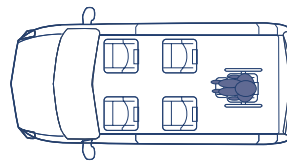

Alternative 'Basic' conversion removes the original Ford seats and replaces with one or two aftermarket seats. This allows the wheelchair user to sit further forward.

Top Features

- Single piece, lightweight ramp with optional fold-flat design creating a useful boot space
- Four-point wheelchair securing with retracting rear restraints and a three-point inertia seatbelt for the wheelchair user (with optional height adjustment)
- Optional winch assist
- Metallic paint and air conditioning as standard for Motability customers

Key Statistics

Standard Seating	5 seats + wheelchair
Ramp length	1,010mm
Ramp width	755mm
Wheelchair access	Ramp
Fuel Type	Diesel
Entry height	1,373mm
External height	1,845mm
External length	4,818mm



Call: 0330 108 7348
bristolstreetversa.com